

## Megatek DVD player DP-260M55HD / DP-225M66HD

### - How to record audio CDs to USB

The DVD player includes a feature to record CDs to USB to transfer audio CDs to MP3 files easily, without a PC. Before ripping an audio CD, please make sure your CD has no copyright protection.

1. Load your CD and insert a USB drive.
2. Press the COPY button on the remote control to enter RIP CD menu.
3. Use the direction buttons and OK button, to highlight and select recording speed between 1x and 4x, and your desired tracks (all as default) to record.
4. Highlight START and then press OK, the device will start copying music from CD to your USB drive, and one pop-up menu will display recording progress and related information, you can highlight CANCEL and press OK button to abort recording at any time.
5. After recording is completed, press OK to exit and go back to the main menu of RIP CD.
6. Highlight EXIT, press OK to exit the RIP CD menu.

#### **Note:**

- Supports USB drives in FAT/FAT32 file system only, NTFS not supported.
- Supports USB 2.0 only, USB 3.0 not supported.
- Supports flash drive capacity not exceeding 128 GB.