 


MEGATEK

USER'S MANUAL

DVD Player

DP-260M55HD

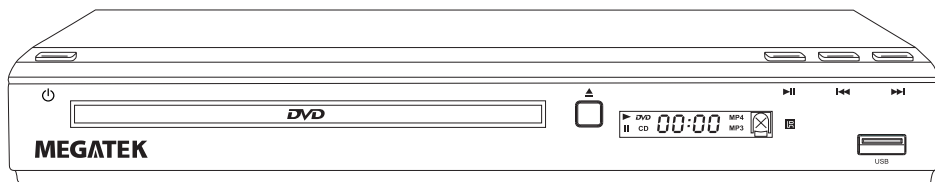

One (1) Year Full Replacement for Defective Product.

Questions or Problems? Contact Us:

✉ service@megatekelec.com

🗉 Amazon Buyer-Seller Messaging

SAFETY WARNING



WARNING:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert user to the presence of important operation and service instructions in the literature accompanying the appliance.



CAUTION: Laser radiation when open. Do not stare into beam.

CAUTION: USE OF ANY CONTROLS, ADJUSTMENTS, OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

Important Safety Instructions

- Read and Keep these instructions.
- Heed all warnings and follow all instructions.
- Do not place this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install it in accordance with the manufacturer's instructions.
- Do not install this product near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.



CAUTION

UNIT

- This unit utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

PLACEMENT

- To reduce the risk of fire, electric shock or product damage,
 - Do not install or place this unit in a bookcase, built-in cabinet or in another confined space.
 - Ensure this unit is well ventilated.
 - Do not obstruct this unit's ventilation openings with newspapers, tablecloths, curtains, and similar items.
 - Do not place sources of naked flames, such as lighted candles, on this unit.

BATTERIES

- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
- When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.
- Mishandling of batteries can cause electrolyte leakage and may cause a fire.
 - Do not mix old and new batteries or different types at the same time.
 - Do not heat or expose to flame.
 - Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.
 - Keep the AAA R03 batteries out of reach of children to prevent swallowing.
 - Do not take apart or short circuit.
 - Do not recharge alkaline or manganese batteries.
 - Do not use batteries if the covering has been peeled off.
 - Remove batteries if you do not intend to use the remote control for a long period of time. Store in a cool, dark place.

FCC Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

TABLE OF CONTENTS

GENERAL INFORMATION

Safety Warning	1
Caution	2
Product Features	4
Package Contents	4
Playable Medias	4
Unit and Disc Care	5
Disc Handling Precautions	5
Inserting the Batteries	5

SYSTEM CONNECTIONS

Power source	6
Video connection	6
Audio connection	6

PRODUCT OVERVIEW

Front View	7
Back View	7

REMOTE CONTROL GUIDE

Remote Control	8
----------------	---

USING YOUR DVD PLAYER

Powering your DVD player	10
--------------------------	----

CHANGING THE PLAYER SETTINGS

SYSTEM SETUP	11
LANGUAGE SETUP	11
AUDIO SETUP	11
VIDEO SETUP	12
SPEAKER SETUP	12
DIGITAL SETUP	12

TROUBLESHOOTING

Troubleshooting	13
-----------------	----

SPECIFICATIONS

Specifications	14
----------------	----

12 Months Warranty

12 Months Warranty	15
--------------------	----

GENERAL INFORMATION

Product Features

Congratulations on your purchase of a high-quality Megatek product.

Your **DP-260M55HD** is designed for reliable and trouble free performance, we wish you great satisfaction in using it.

Main Features

- Fully compatible with DVD, DVD-R/RW, VCD, CD, CD-R/RW, PICTURE-CD, etc.
- Up-converts DVD video to Full-HD 1080p with fine details.
- Built-in USB port
- Full functional remote control
- Automatic screen protection
- PAL/Auto/NTSC optional
- Universal power supply: AC 100-240V~, 50/60Hz

Input Terminals

- USB Port

Operation Functions:

- Repeat, A-B repeat play function
- Supports random playback
- Multi-level picture zoom
- Multi-grade fast or slow motions, multi-angle play
- Adjustable screen aspect ratio (4:3 or 16:9)
- FWD / REV, slow motion and single-step play
- Resume / memory play function

Output Terminals

- HDMI output
- Coaxial digital audio output
- Composite video output
- Left / Right stereo audio outputs

Package Contents

- | | |
|---------------------|---|
| • DVD player | 1 |
| • HDMI cable | 1 |
| • Remote control | 1 |
| • User's manual | 1 |
| • Quick start guide | 1 |
| • RCA cable | 1 |

Region Codes

DVD-Video
This unit plays DVD-Video marked with labels containing the region number "1", "2", "3", "4", "5", "6", or "ALL".

Playable Medias

You can play back the following medias:	
DVD Video	DVD-Video format
DVD-R	DVD-Video format
DVD-RW	DVD-Video format
CD-Audio	CD-DA, Video CD, Super Video CD
CD-R	CD-DA, JPEG, MP3,
CD-RW	Video CD, Super Video CD
USB	MP3, JPEG

NOTE

- It may not be possible to play the medias in some cases due to the type of media, the condition of the recording, the recording method and how the files were created.
(For USB devices)
- This unit does not guarantee connection with all USB device.
- This unit does not support USB device charging.
- FAT and FAT32 file systems are supported.

GENERAL INFORMATION (cont.)

- This unit supports USB2.0 High Speed.
- This unit supports an HDD formatted in FAT32. If the HDD is not recognized the power to the HDD may not be supplied. Supply power from an external source.

Unit and Disc Care

Clean this unit with a soft, dry cloth.

- Never use alcohol, paint thinner or benzene to clean this unit.
- Before using chemically treated cloth, read the instructions that came with the cloth carefully.
- Cleaning of the lens is generally not necessary although this depends on the operating environment.
- Do not use commercially available lens cleaners as they may cause malfunction.

Clean discs

- Wipe with a damp cloth and then wipe dry.



Disc Handling Precautions

- Handle discs by the edges to avoid inadvertent scratches or fingerprints on the disc.
- Do not attach labels or stickers to discs.
- Do not use record cleaning sprays, benzene, thinner, static electricity prevention liquids or any other solvent.
- Do not use the following discs:
 - Discs with exposed adhesive from removed stickers or labels (rented discs etc.).
 - Discs that are badly warped or cracked.
 - Irregularly shaped discs, such as heart shapes.
- The digital audio content side of a DualDisc does not meet the technical specifications of the Compact Disc Digital Audio (CD-DA) format so playback may not be possible.

Inserting the Batteries

Insert 2 AAA batteries (not supplied) into the battery compartment of the remote control before using it.

1. Slide to remove the cover of the battery compartment.
2. Insert the batteries with their poles (+ and –) matching those marks in the remote control's battery compartment.
3. Slide back the cover of the battery compartment.

TIP:

To use the remote control, point it directly towards the remote control sensor on the front panel of the DVD player.


SYSTEM CONNECTIONS

Power source

Use the polarized AC line cord provided for operation on AC power. Insert the AC cord plug into a standard 120V~60Hz polarized AC outlet. If you cause a static discharge when touching your player and your player fails to function, unplug your player from the AC outlet and plug it back in. Your player should return to normal operation.

Warnings

- The system uses a polarized AC plug with one wide blade and one narrow blade. The plug will only fit into matching polarized power outlets. This is a safety feature to reduce the possibility of electric shock. If the plug will not fit in your power outlets, you probably have outdated, non-polarized outlets which should be changed by a qualified, licensed electrician. Do not file the wide blade on the plug or use an adapter to make the plug fit into your outlet.

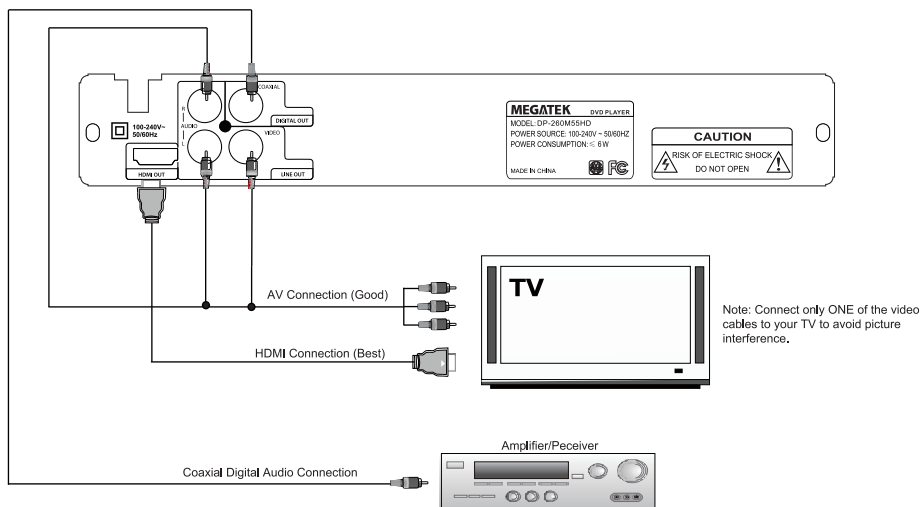

Note: Connect only ONE of the video cables to your TV to avoid picture interference.

Video connection

Caution:

Do not plug in the AC power plug until you have finished making the system connections.

To connect to your TV with a video cable:

- Connect one of the **VIDEO OUT** jacks (HDMI, or composite) on your player to the corresponding **VIDEO IN** jack on the TV (see illustration)

Audio connection

To connect to your TV with audio source:


- Connect the left and right **AUDIO OUT** jacks on the back of your player to the audio left and right in jacks on the **TV** using the supplied audio cables. (No need of the above audio connection in case of HDMI connection).

To connect a two-channel digital stereo or A/V receiver with multi-channel decoder:

- Connect your player's **COAXIAL DIGITAL AUDIO OUT** jack to the corresponding in jack on your amplifier. Use a coaxial digital audio cable (not supplied).

PRODUCT OVERVIEW

Front View

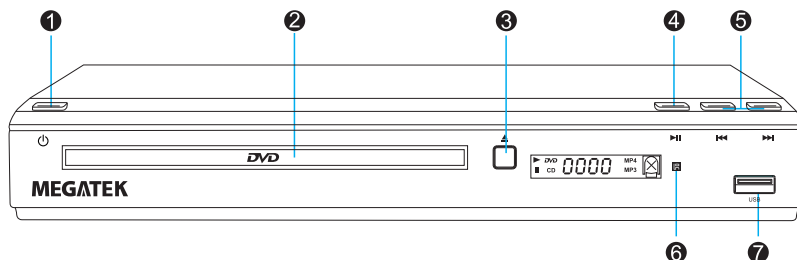

1. Power button

Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.

2. Disc tray

When inserting a disc, ensure that it's label side is facing the right way up.

3. OPEN/CLOSE

Opens/closes the disc tray.

4. Play / Pause

Starts or pauses playback.

5. Skip


- Skips to previous title/chapter/track or next title/chapter/track.
- Switches the MENU page of VCD equipped with Playback Control (PBC) function.

6. Remote Control Receiver

7. USB port

Connects a USB device.

Back View

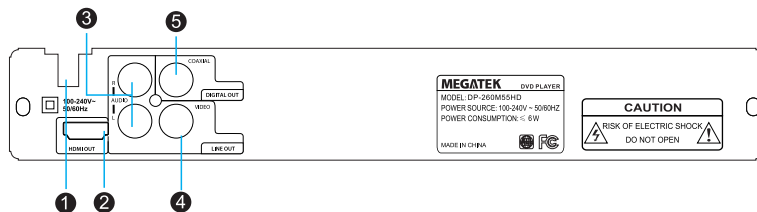

1. Power-supply cord


2. HDMI out

5. Coaxial digital audio output

3. Left/Right analog audio outputs

4. Composite video output

REMOTE CONTROL GUIDE

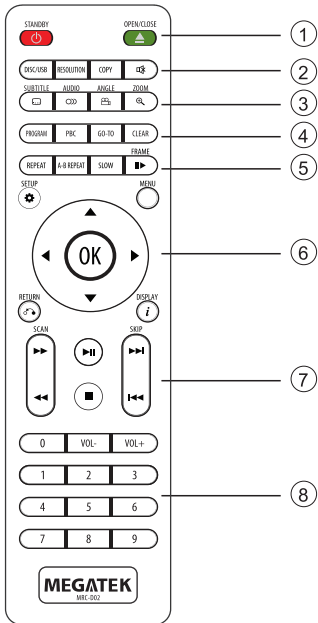

① Standby/Power On switch

Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.

OPEN/CLOSE

Opens/closes the disc tray.

② DISC/USB

Switches to the USB mode / Returns to the disc mode

RESOLUTION

Selects the type of video signal output. Press this button repeatedly to have the player output video signals of the highest resolution acceptable for your TV. If the picture is not clear, unnatural or otherwise not to your satisfaction, try another option that suits the disc, TV/projector, etc. For details, refer also to the instruction manual supplied with the TV/projector, etc.

COPY

Records music contents from loaded CD disc to inserted USB drive.

MUTE

Press to enable/disable the audio output.

③ SUBTITLE

Shows and selects different subtitle.

AUDIO

Changes soundtracks.

ANGLE

Switches the camera angle.

ZOOM

Magnifies/shrinks the image up to four times the original size, scroll using .

④ PROGRAM

Sets the playback order.

1. Press to select the item.

2. Press 0 to 9 to specify the 2-digit order.

e.g., 5: 0 5

15: 1 5

To cancel: Press CLEAR.

3. Press to select Start, press OK to start programmed playback.

4. Press STOP twice to clear the whole program.

PBC

Sets PBC of VCD equipped with Playback Control (PBC) function to On/Off.

GO-TO

Specifies the point of time where you would like to start playback.

CLEAR

Clear the input information.

⑤ REPEAT

Selects various repeat mode, or starts random playback.

A-B REPEAT

Specifies the parts you want to play repeatedly.

1. During playback, press A-B REPEAT to specify starting point (point A).

2. When you reach the ending point (point B), press it again.

SLOW

Plays back at 1/2, 1/3, 1/4, 1/5, 1/6, or 1/7 of the original speed.

FRAME

Plays Video frame by frame.

REMOTE CONTROL GUIDE (Cont.)

⑥ **SETUP**

Enters or exits the system setup menu.

MENU: Displays the menu.



Selects items, input position, etc.

– For moving the display position of enlarged images

– For rotating JPEG images

OK

Confirms menu selection.

RETURN 

(DVD disc menu only).

Returns to the previous display.

DISPLAY

Displays information on TV screen during playback.

⑦ **SCAN**

Starts fast reverse or fast forward.

PLAY/PAUSE  

Starts or pauses playback.

STOP 

Stops playback.

SKIP  

- Skips to previous title/chapter/track or next title/chapter/track.
- Switches the MENU page of VCD equipped with Playback Control (PBC) function.

⑧ **0-9**

To select title/chapter/track numbers etc.

e.g., 5: 5
 15: 1 → 5

VOL-VOL+

Decreases/increases the audio output.


USING YOUR DVD PLAYER

Powering your DVD player

- ① Make sure that your DVD player is connected to power.
- ② Press **⏻** (POWER) button on the top left of your DVD player, or on the remote control, to turn it on. The start-up picture appears on the screen.
- ③ Press **⏻** (POWER) button on the top left of DVD player, or on the remote control, to turn it off.

Playing a DVD or audio CD, or USB

- ① Turn on the TV and select the correct video input.
- ② Press **⏻** to turn on your player.
- ③ Place a disc or connect a USB device.

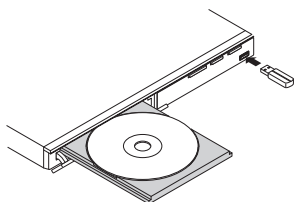

- If this unit is not switched to the USB mode when connecting the USB device, press USB button on the remote control.
- Depending on the disc, playback may start automatically.
(JPEG Only)
- When you press PLAY/PAUSE **▶/⏸** instead of OK, you can start the slide show.

Stopping playback

Press **STOP ■**.

The stopped position is memorized.

Power Resume function

Press PLAY/PAUSE **▶/⏸** to restart from this position.

This position is memorized even after power outage (Power Resume). However, if the restart position is misaligned or depending on the media and playback conditions, the unit may not operate normally.

NOTE

- Screen saver will start automatically if the media playback is stopped and the menu is closed for about 5 minutes.
- The player will automatically switch to Power Standby mode if you do not press any buttons for about 25 minutes after the media has stopped playing.

Controlling DVD or audio CD playback

- Press **■** (STOP) once to stop playback. Your DVD player remembers where you stopped. If you press **▶⏸**, your DVD player starts playing at the point where you stopped.
- Press **■** (STOP) twice to stop playback. If you press **▶⏸**, your DVD player starts playing at the beginning of the disc.
- Press **▶⏸** to pause playback. Press this button again to resume playback.
- Press **▶▶** to fast-forward the disc. Each time you press this button, the fast-forward speed changes from 2 to 4 to 8 to 20 times the normal speed.
- Press **◀◀** to fast-reverse the disc. Each time you press this button, the fast-reverse speed changes from 2 to 4 to 8 to 20 times the normal speed.
- Press **▶▶** (NEXT) to skip to the next title, chapter, or track.
- Press **◀◀** (PREV) to skip to the previous title, chapter, or track.

Adjusting the volume

- Press **VOL-** or **VOL+** to decrease or increase the volume.
- Adjust the volume of playback by turning it up or down on your TV, stereo system, or home theater.


Programming your DVD player

- 1 Insert a disc into the DVD player.
- 2 Press the PROG button on the remote control.
- 3 Select the chapter number you want to play, from the list on the screen.
- 4 Press **▶⏸** to begin playback.

CHANGING THE PLAYER SETTINGS

Your DVD player has a Setup menu you can use to adjust settings. To change your player's settings:

- 1. Press **SETUP** on the remote control. The Setup Menu opens on your TV or monitor.

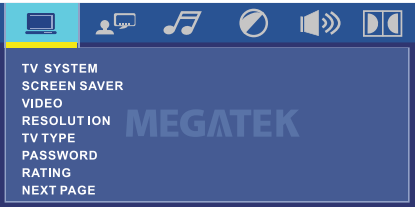

- 2. Press **◀** or **▶** to select a different menu, or press **▼** or **▲** to highlight an item on the displayed menu.
- 3. When you have selected an item on the menu, press **OK** to change the setting for that item. A sub-menu with setting options is displayed.
- 4. Press **▼** or **▲** to highlight your desired setting, then press **OK** to confirm your setting.
- 5. Press **SETUP** to exit the menu.

Menu	Available options
SYSTEM SETUP	<p>TV SYSTEM—Select NTSC, PAL, or AUTO.</p> <p>SCREEN SAVER—Turn screen saver On or Off.</p> <p>VIDEO-CVBS—Outputs composite video via VIDEO port. (This setting is unchangeable.)</p> <p>RESOLUTION—There are five options for the HDMI port: 480I/576I, 480P/576P, 720P, 1080I, or 1080P. (The number indicates the vertical resolution. I=Interlaced scanning. P=Progressive scan. Progressive scan gives a better picture. Select a resolution that is supported by your TV or monitor.)</p> <p>TV TYPE—Choose based on the kind of TV the player is connected to:</p> <ul style="list-style-type: none">• 4:3/PANSCAN—Select if connected to a standard TV. The left and right sides of widescreen images will be cut off.• 4:3/LETTERBOX—Select if connected to a standard TV. Widescreen images will not fill the screen vertically.• 16:9—Select if connected to a widescreen TV.

Menu	Available options
	<p>PASSWORD—Lock or Unlock. To unlock the RATING feature or change the password, press the numeric buttons to input the existing password (the factory-set password is "0000"), then press ENTER. You can then change the RATING setting as shown below, or input a new password and press ENTER.</p> <p>RATING—After entering the password (as shown above), Select the highest rating you want anyone to view, then lock the password. To play a disc with a higher rating, the password must be entered.</p> <p>RESUME—When this option is turned on and you open the disc tray, your DVD player remembers where you stopped. If you close the tray with the same disc loaded, your DVD player starts playing the point where you stopped.</p> <p>DEFAULT—Select to restore the player to factory settings.</p>
LANGUAGE SETUP	<p>OSD LANGUAGE—Select the language for the on-screen display (menus).</p> <p>AUDIO LANG—Select the DVD audio language you want.</p> <p>SUBTITLE LANG—Select the DVD subtitle language you want.</p> <p>MENU LANG—Select the DVD menu language you want.</p>
AUDIO SETUP	<p>AUDIO OUT—Select the digital audio format for Coaxial output:</p> <ul style="list-style-type: none">• S/PDIF OFF—No digital output.• S/PDIF RAW—Digital audio output is in the original format, such as AC3.• S/PDIF PCM—Digital audio output is converted to PCM. <p>HDMI AUDIO—Select the digital audio format for HDMI output:</p> <ul style="list-style-type: none">• AUTO—It will output digital audio in the original format, such as AC3, if the format is supported by your connected TV or receiver. Or it will convert the digital audio format to PCM, and output it via HDMI, if the original format is not supported by your connected TV or receiver.• PCM—Digital audio output is converted to PCM. Select it when your receiver or TV does not support the original digital audio format.

CHANGING THE PLAYER SETTINGS (Cont.)

Menu	Available options
	KEY —Adjusts the tone level.
VIDEO SETUP	<p>BRIGHTNESS—Sets the picture brightness.</p> <p>CONTRAST—Sets the black/white balance.</p> <p>HUE—Sets the color balance, red to blue.</p> <p>SATURATION—Sets the color saturation.</p> <p>SHARPNESS—Sets the picture sharpness.</p> <p>Note: Press the up and down arrow buttons to adjust these settings. Every time you turn on your player, the player will be resumed to the sets you set up last time.</p>
SPEAKER SETUP	<p>DOWNMIX—Select how the player downmixes multi-channel audio to stereo output: (Applies to VCD discs only.)</p> <ul style="list-style-type: none"> • LT/RT—2-channel output, main channel with surround. • STEREO—2-channel output, main right channel with right surround and main left channel with left surround.
DIGITAL SETUP	<p>OP MODE—Select according to the TV sound level:</p> <ul style="list-style-type: none"> • LINE OUT—For most systems, this is the correct setting. • RF REMOD—If the sound level is too low when connected directly to the TV, choose this setting. <p>DYNAMIC RANGE—Choose the range between the loudest and softest sounds. This setting is only available when OP MODE is set to LINE OUT.</p> <p>DUAL MONO—Choose the audio output mode. STEREO is for normal playback and MONO L, MONO R, and MIX MONO are for karaoke playback.</p>

TROUBLESHOOTING

Please check for causes of problems in accordance with the following chart before contacting any maintenance personnel.

Symptom	What to check
The player does not play.	<ul style="list-style-type: none">- If disc is loaded in.- If disc is loaded upside down.- If disc is dirty or warped.- If water condensation has occurred. If it occurs, take out disc and leave the player on for a few hours until it backs to normal.
There is no sound.	<ul style="list-style-type: none">- If the volume of either your player or the connected TV/receiver is set to "0".- If the system connection is correct.- If the power of speakers is turned on.- Make sure the input for the TV and stereo system are correct.- If the sound setup of DVD disc is correct.- If disc is dirty or warped.
There is no picture.	<ul style="list-style-type: none">- If TV is turned on and is in correct video mode.- If system connection is correct.
Poor AV performance.	<ul style="list-style-type: none">- If disc is dirty, warped or damaged.
Cannot continue to play and play a section repeatedly.	<ul style="list-style-type: none">- If it is in A-B repeat status. If it is true, press A-B button to cancel.- If disc is dirty or damaged. If it is true, clean it or skip the section.
The remote control does not work.	<ul style="list-style-type: none">- If there are obstructions between the remote control and the player.- If the remote control is pointing at the player.- If batteries are inserted or the polarity is correct.- If batteries are weak.

Note:

Static or other external interference may cause the abnormality of the player. At this circumstance, unplug the power - supply cord from the outlet and plug it in again to reset the player so that the normal operation will be resumed. If you are still having problems, then please disconnect the power and consult your service center or a qualified technician.

SPECIFICATIONS

Laser Wavelength		Wavelength: 780/650nm
Video System		PAL/Auto/NTSC
Frequency Response		20Hz-20Khz ±2.5dB
Audio S/N Ratio		≥ 85dB
Audio distortion + noise		≤ -70(1KHz)
Channel Separation		≥ 70dB(1KHz)
Dynamic Range		≥ 80dB(1KHz)
Audio Output	Analog Audio Out	Output Level:2 V ± $\begin{smallmatrix} 0,2 \\ 1,0 \end{smallmatrix}$, Load: 10kΩ
	Digital Audio Out	Coaxial
Video Output	Video Out	Out Level:1 Vp-p ± 0.2, Load: 75Ω Unbalanced Negative
	HDMI	Yes
Power Source		AC 100-240V, 50/60Hz
Power Consumption		≤6W
Dimensions		260 x 195 x 40mm
Weight		Approx. 0.95kg

DESIGN AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

12 Months Warranty

Thank you for choosing Megatek.

Megatek Electronics warrants your new product to be free from defects in materials and workmanship for a period of twelve (12) months, from the date of receiving. This warranty is in addition to your rights under Amazon's return and refund policies which apply to your purchase.

Megatek will provide you with a brand-new replacement (where possible) for this product if it becomes defective within the warranty period. Megatek will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please contact our Customer Service with your order ID and description of the problem, for warranty claim or any difficulties with your product:

Email: service@megatekelec.com

Amazon Buyer-Seller Messages: Go to Your Orders then find your order in the list, click **Megatek Electronics** link below the product title, click the **Ask a Question** button.

One (1) Year Full Replacement for Defective Product.

Questions or Problems? Contact Us:

 service@megatekelec.com

 Amazon Buyer-Seller Messaging