 


MEGATEK

Digital Luggage Scale

MLS-22B / MLS-22S

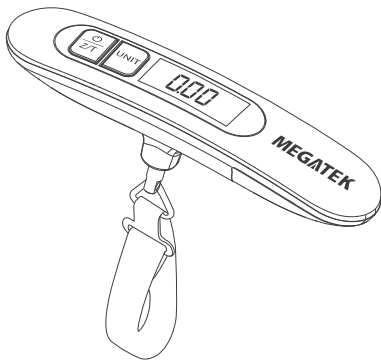

User's Manual

Please read this manual carefully before operation and keep it well for future use.

 
One (1) Year Full Replacement for Defective Product.

Questions or Problems? Contact Us:


✉ service@megatekelec.com

📧 Amazon Buyer-Seller Messaging

Product Overview

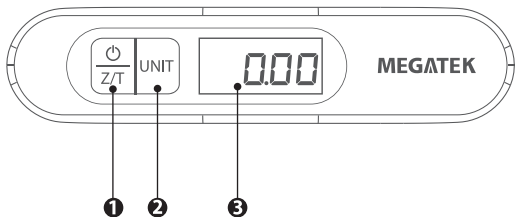

 - ❶ Power/Tare Button
- ❷ Unit Selection Button
- ❸ LCD Display

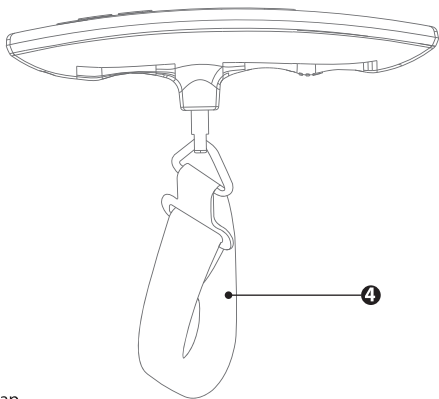

- ❹ Strap



DISPOSAL

Directions for proper disposal of the product according to EU directive 2012/19/EU

At the end of its working life, this equipment must not be disposed of as a household waste. It must be taken to special local community waste collection centers or to a dealer providing this service. Disposing of electrical and electronic equipment separately avoids possible negative effects on the environment and human health deriving from an inappropriate disposal and enables its components to be recovered and recycled to obtain significant savings in energy and resources. In order to underline the duty to dispose of this equipment separately, the product is marked with a crossed-out dustbin.

Congratulations on your purchase of a high-quality Megatek product. Your MLS-22B / MLS-22S is designed for reliable and trouble free performance, we wish you great satisfaction in using it.

How to use

• Installing the battery

1. Please open the battery cover gently and close it after removing the plastic film, then the scale is ready to use.
2. Please insert battery (1xCR2032 lithium), paying attention to the polarity signs inside the battery compartment if you need to replace it.

• Setup

1. Hang the scale in an upright position and press the power button $\frac{\text{ON}}{\text{Z/T}}$.
2. Press the UNIT button to select your preferred unit of weight:
Kg=Kilograms / g=Grams / lb=Pounds / Oz=Ounces

Caution:

The digital luggage scale is not designed for weighing animals, babies or children. If you have back problems or any health issues regarding the safe lifting of items, please restrain from using the Digital Luggage Scale to weigh heavy items.

• Using the strap

1. Unfix the buckle
2. Locate a handle or fixing on the item of luggage that is suitable for the scale's strap to connect. Please ensure that the fixing is centrally located and strong enough to support the entire weight of the item.
3. Securely fix the strap by passing it under the handle or fixing the handle or fixing and closing the buckle. Please ensure the buckle is securely closed prior to lifting.

• Weighing

1. After correctly securing the luggage to the scale, gently lift the scale and a reading will be shown on the LCD display.
2. Once the luggage is stable, the LCD display will read "HOLD" and the data will be automatically memorized. Lay down the luggage and read the data.

Note:

The LCD display will show "Err" if the item is overweight. Please try to lose some weight from the luggage to ensure the overload item/luggage will not harm the scale.

• Tare/Zero

Firstly, find an object and hang it to the strap, once the weight is held, press the POWER button $\frac{\text{O}}{\text{Z/T}}$ to set the scale to zero, then you can see Tare on the screen. And now you can add an additional object to the weight, the LCD screen will display its net weight.


• Power off

Press and hold the button $\frac{\text{O}}{\text{Z/T}}$ for 3 seconds to turn off the scale in non-working status.

Note:

The scale has an automatic power-off function which will shut off the device after 60 seconds of inactivity.

Warning:

1. When powering on the scale, please ensure to keep it in an upright position.
2. To ensure the accuracy, make sure to grip the handle tightly when weighing, and avoid interfering with any other part of the device or item being weighed.
3. Avoid any strong impacts or rough treatment to the device.
4. Only clean the device with a soft cloth, do not use any chemical detergents.
5. If the display read "  "and "Lo", this indicates low battery, please replace the battery immediately.
6. For long-term storage of the device, please remove the battery to avoid any risks of leakage.
7. Should you encounter any problems, please contact the manufacturer, and do not try to repair the device.
8. Do not immerse the scale into the water.
9. Do not dispose of the batteries in the fire as they may explode or leak.

12 Months Warranty

Thank you for choosing Megatek.

Megatek Electronics warrants your new product to be free from defects in materials and workmanship for a period of twelve (12) months, from the date of receiving. This warranty is in addition to your rights under Amazon's return and refund policies which apply to your purchase.

Megatek will provide you with a brand-new replacement (where possible) for this product if it becomes defective within the warranty period. Megatek will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please contact our Customer Service with your order ID and description of the problem, for warranty claim or any difficulties with your product:

Email: service@megatekelec.com

Amazon Buyer-Seller Messages: Go to Your Orders then find your order in the list, click **Megatek Electronics** link below the product title, click the **Ask a Question** button.

MEGATEK



www.megatekelec.com