 


MEGATEK

USER'S MANUAL

Portable DVD Player

PD-1256

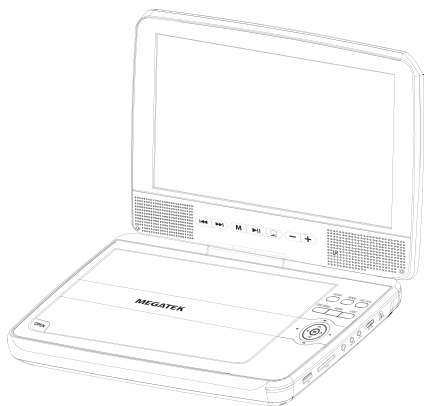

Need Help? We've Got You Covered

Most issues are quick and easy to fix.

- ✓ **1-Year Full Replacement Warranty**
- ✓ **Fast Response Support Team**

✉ support@megatekelec.com

👉 **Contact us first — we'll help you fix it fast**



IMPORTANT NOTES

- The included car adapter is designed for 12V vehicle power outlets only.
Using a power source higher than 12V may damage the player.
- Avoid touching the laser lens inside the disc compartment.
- Fully charge the player before first use.
- If the player will not be used for an extended period, recharge the battery every 2–3 months to help maintain battery performance.
- This player supports DVDs, CDs, and compatible disc formats only.
Blu-ray discs are not supported.

Contents

Safety instructions	2
Your portable DVD player	3
Supported Disc Formats	3
What's Included	4
Overview of the Main Unit	5
Overview of the Remote Control	9
Getting Started	13
Charge the Battery	13
Install remote control battery	14
Install the Car Mounting Pouch	15
Using the Player	16
Turn on	16
Select the On-Screen Display Language	16
Play USB Drives or Memory Cards	17
Connect to a TV	18
Use the Player Screen as an External Display	19
Settings	20
Troubleshooting	22
Maintaining your DVD Player	24
Product Information	26
Legal Notices	27
12-Month Warranty	28

Safety instructions

Please read the following safety information before using the player.

- Use only the supplied power adapters with this product.
- The included car adapter is designed for 12V vehicle power outlets only.
- Do not expose the player to water, moisture, or excessive heat.
- Do not block the ventilation openings during use.
- Keep the player away from direct sunlight, open flames, and heat sources.
- Do not attempt to disassemble or repair the player yourself.
- Unplug the power adapter during lightning storms or when the player will not be used for an extended period.
- Do not expose batteries to excessive heat such as direct sunlight or fire.
- Refer servicing to qualified service personnel if the product has been damaged or is not operating properly.



Warning

- Do not disassemble or modify the player.
- Keep the player away from water, excessive heat, direct sunlight, and open flames.
- Do not block the ventilation openings during operation.
- Disconnect the power adapter before cleaning or when the player will not be used for an extended period.
- Refer servicing to qualified service personnel only.

Your portable DVD player

Thank you for choosing MEGATEK.

The PD-1256 Portable DVD Player is designed to provide reliable and easy playback of DVDs, CDs, and compatible media files at home or on the go.

The player features a built-in LCD screen and supports playback from DVD discs, USB drives, and SD/MMC memory cards.

You can also connect the player to a TV using the included AV cable for larger-screen viewing.

Supported Disc Formats

- DVD-Video
- DVD±R / DVD±RW
- CD Audio
- CD-R / CD-RW
- MP3 CDs
- JPEG Photo Discs
- Video CDs (VCD)

Important

- Blu-ray discs are not supported.
- Some recorded discs may not be compatible depending on the recording software and disc format used.
- For best playback compatibility, use finalized discs in good condition.


USB and Memory Card Playback

The player supports playback of compatible media files from USB flashdrives and SD/MMC memory cards formatted in **FAT32** format(**up to 128GB**).

What's Included

- Portable DVD Player
- Remote Control
- AC Power Adapter
- Car Power Adapter
- AV Cable
- Car Mounting Pouch
- User Manual

Overview of the Main Unit

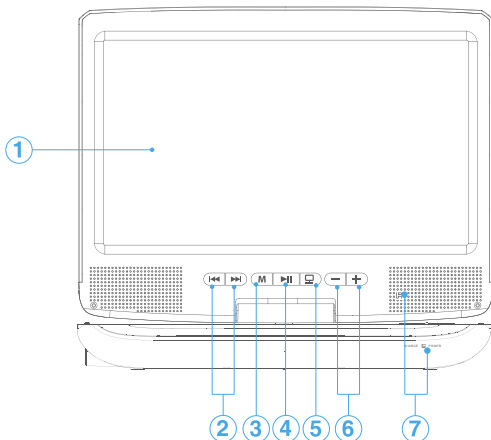

① LCD Screen

- Displays video, menus, and playback information.

② ⏮ ⏭ (Skip)

- Skips to the previous or next chapter, track, or file.
- For VCD discs with PBC enabled, switches between menu pages.

③ M (Mode)

- Switches between DVD, USB, and SD/MMC card playback modes.

④ ▶⏸ (Play / Pause)

- Starts, pauses, or resumes playback.

⑤ ⏻ (Screen On/Off)


- Turns the LCD screen on or off.
Audio playback continues even when the screen is turned off.

⑥ Volume +/-

- Decreases or increases volume.

⑦ CHARGE / (Remote Sensor)/ POWER Indicator

- Indicates charging and power status.
- Also receives signals from the remote control.

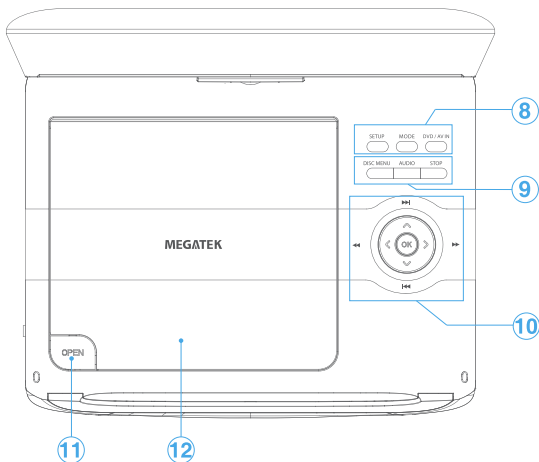

⑧ SETUP

- Opens or exits the settings menu.

MODE

- Switches between DVD, USB, and SD/MMC card playback modes.

DVD / AV IN

- Switches between DVD playback mode and AV input mode.

9 **DISC MENU**

- Opens or exits the DVD disc menu.
- For VCD discs, turns Playback Control (PBC) on or off.

AUDIO

- Selects the audio language or audio mode, if available.

STOP

- Stops playback.
- The player remains powered on in STOP mode.

10 **⏮ ⏭ (Skip)**

- Skips to the previous or next chapter, track, or file.
- For VCD discs with PBC enabled, switches between menu pages.

⏮ ⏭ (Search)

- Fast-forwards or rewinds during playback.

OK


- Confirms an entry or selection.
- Starts, pauses, or resumes playback

11 **OPEN**

- Press to open the disc compartment lid.

12 **Disc Compartment**

- When inserting a disc, make sure the label side faces upward.

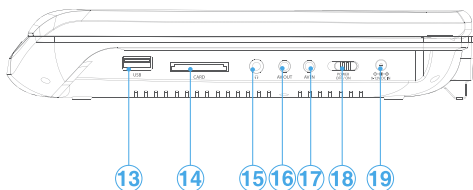

13 USB Port

- Connects a USB flash drive for media playback.
- USB charging is not supported.

14 Card Slot

- Supports SD/MMC memory card playback.

15 (Headphone Jack)

- Connects wired headphones or external speakers.

16 AV OUT

- Outputs audio and video to a TV or external display device.

17 AV IN

- Receives audio and video from an external device.


18 POWER OFF/ON

- Turns the player off or on.

19 DC IN

- Connects the supplied AC or car power adapter.

Overview of the Remote Control

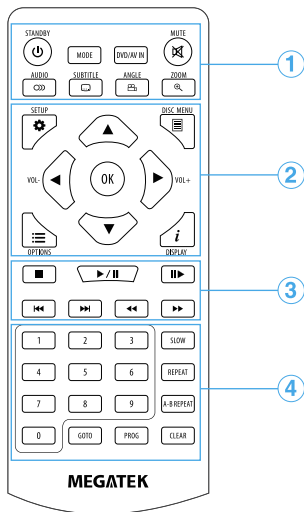

① **STANDBY**

- Turns the player on or enters standby mode.
- The player still consumes a small amount of power in standby mode.

MODE

- Switches between DVD, USB, and SD/MMC card playback modes.

DVD / AV IN

- Switches between DVD playback mode and AV input mode.

MUTE

- Turns the sound on or off.

AUDIO

- Selects the audio language or audio mode, if available.

SUBTITLE

- Selects the subtitle language, if available.

ANGLE

- Switches between available camera angles on supported DVDs.

ZOOM

- Zooms in or out during photo or video playback.

2 SETUP

- Opens or exits the settings menu.

DISC MENU

- Opens or exits the DVD disc menu.
- For VCD discs, turns Playback Control (PBC) on or off.

◀ ▶ ▲ ▼ (Navigation Buttons)

- Navigates menus and selections.
- Rotates JPEG images during photo playback.
- Moves the view area when zoomed in.

VOL - / VOL +

- Adjusts the volume level.

OK

- Confirms a selection.
- Starts, pauses, or resumes playback.

OPTIONS

- Displays available playback options, if supported by the disc.

DISPLAY *i*

- Shows playback information on the screen.

③ ■ (Stop)

- Stops playback.
- The player remains powered on in STOP mode.

▶/|| (Play/Pause)

- Starts, pauses, or resumes playback.

II▶ (Frame)

- Advances video one frame at a time during paused playback.

⏮ ⏭ (Skip)

- Skips to the previous or next chapter, track, or file.
- For VCD discs with PBC enabled, switches between menu pages.

⏮ ⏭ (Search)

- Fast-forwards or rewinds during playback.

④ Numeric Keypad (0–9)

- Enters track, chapter, title, or menu numbers.

SLOW

- Plays video in slow motion.
- Press repeatedly to select different slow speeds.

REPEAT

- Repeats the current chapter, track, title, or disc.

A-B REPEAT

- Repeats a selected section of playback.

GOTO

- Jumps to a selected title, chapter, track, or playback time.

PROG

- Creates a custom playback sequence.
 1. Press **PROG** to open the program menu.
 2. Use the navigation buttons to select a track, chapter, or file.
 3. Press **OK** to add the selected item to the program list.
 4. Repeat the steps above to add additional items.
 5. Select **PLAY** and press **OK** to begin programmed playback.
 6. To clear the program list, select **CLEAR** and press **OK**.

CLEAR

- Clears the current number entry.

Getting Started


Charge the Battery

The player includes a built-in rechargeable battery. For best performance, fully charge the battery before first use.


! Caution

- Use only the supplied power adapters with this product.
- The included car adapter is designed for 12V vehicle power outlets only. Using a higher-voltage outlet may damage the player.

1. Slide the **POWER OFF/ON** switch to **OFF** position.

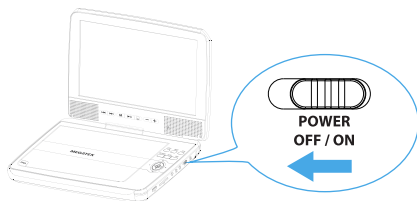

2. Connect the supplied AC adapter to the player and a wall outlet, or connect the supplied car adapter to a 12V vehicle power outlet.

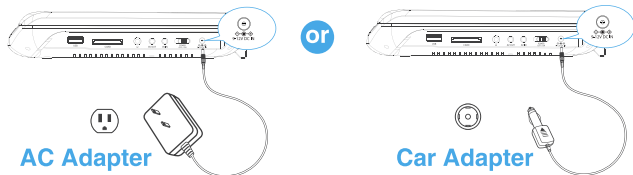

- The CHARGE indicator lights red while charging.
- The indicator turns green when the battery is fully charged.
- A full charge typically takes about 5 hours.

 Note


The player can be used while connected to AC or car power.

Important

If the player will not be used for an extended period, recharge the battery every 2–3 months to help maintain battery performance.

Install remote control battery

1. Open the battery compartment cover.
2. Insert two AAA batteries, matching the polarity (+/-) markings inside the compartment.
3. Close the battery compartment cover until it clicks into place.




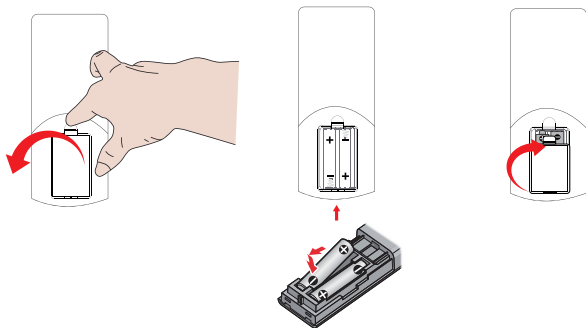


 Note

Do not mix old and new batteries or different battery types.

Install the Car Mounting Pouch

    To use the player in a vehicle, mount it to the back of a front-seat headrest using the included mounting pouch.

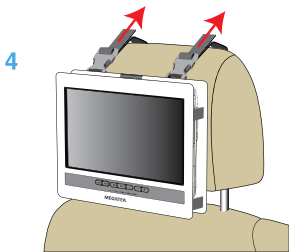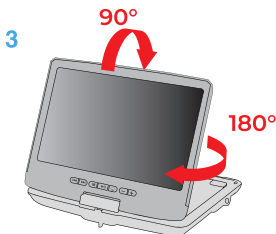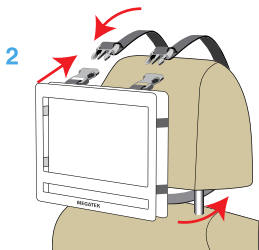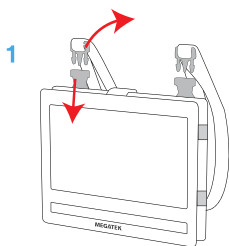

1. Release the buckles and adjust the straps to the desired length.
2. Wrap the straps around the headrest posts and secure the buckles.
3. Pull the straps tight until the pouch is firmly secured.
4. Insert a disc into the player and rotate the screen outward.
5. Slide the player into the pouch and adjust as needed for a secure fit.

Using the Player

Turn on

Slide the **POWER OFF/ON** switch to the **ON** position.



↳ The power indicator lights green when the player is turned on.



Note

If the screen appears blank while audio is playing, press the  (Screen On/Off) button to turn the LCD screen back on.

Select the On-Screen Display Language

You can change the language used for on-screen menus.

1. Press **SETUP**.
2. Select **[LANGUAGE SETUP] > [Osd Language]**.
3. Press the navigation buttons to select a language.
4. Press **OK** to confirm.
5. Press **SETUP** to exit.


Play DVD or CD Discs

1. Press the **OPEN** button to open the disc compartment lid
2. Insert a disc with the label side facing upward.

3. Close the disc compartment lid.

- ↳ If playback does not begin automatically, press ►/|| or **OK**.
If a disc menu appears, select an item using the navigation buttons, then press ►/|| or **OK** to begin playback.
Press ■ (Stop) twice to fully stop playback.
Press ◀◀ or ▶▶ to skip chapters, tracks, or files.
Press ◀◀ or ▶▶ repeatedly to search at different speeds.

Play USB Drives or Memory Cards

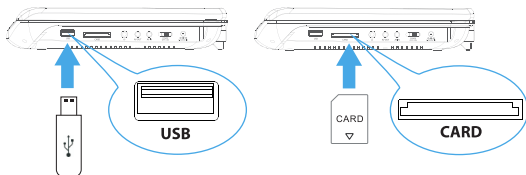

Insert a USB flash drive into the USB port or an SD/MMC card into the card slot.

2. The player may switch to USB or card playback mode automatically.

If necessary, press **MODE** to select USB or Card mode.

3. Use the ▲ / ▼ buttons to select a file or folder.

4. Press **OK** to open a folder or start playback.

5. Press ►/|| or **OK** to pause or resume playback.

6. Press ■ (Stop) to stop playback.

! Notes


- Supports **FAT32** format only (**NTFS not supported**).
- Supports USB drives and memory cards up to **128GB**.
- Some media files may not be compatible depending on file format and encoding.
- USB charging is not supported.

Connect to a TV

You can connect the player to a TV using the included AV cable.

1. Connect the included AV cable to the **AV OUT** jack on the player.
2. Connect the other end of the cable to the matching AV input jacks on the TV.
3. Turn on the player and the TV.
4. Set the TV to the correct AV input source.

Audio and video from the player will now play through the TV.

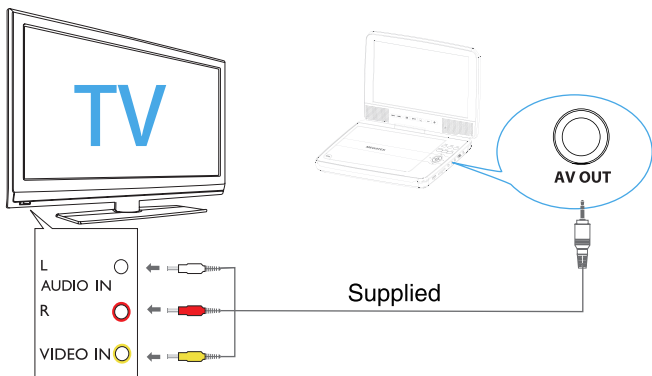

Note


Match the colors of the AV cable connectors with the corresponding TV input jacks (**Yellow = Video, White = Left Audio, Red = Right Audio**).

Use the Player Screen as an External Display

You can use the player screen to display video from another device.

1. Connect the included AV cable to the **AV IN** jack on the player.
2. Connect the other end of the cable to the AV output jacks on the external device.
3. Turn on the player.
4. Press **DVD / AV IN** to switch to **AV IN** mode.

Video and audio from the connected device will now play through the player screen and speakers.

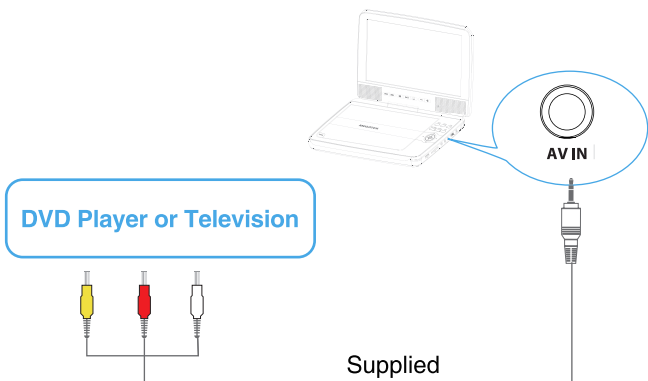

Note

Match the colors of the AV cable connectors with the corresponding audio/video jacks.

Settings

Use the settings menu to customize playback, display, audio, and system preferences.

1. Press **SETUP** to open the settings menu.
2. Use the navigation buttons to select a setting.
3. Press **OK** to confirm your selection.
4. Press **SETUP** to exit the settings menu.

SYSTEM SETUP

TV System	Selects the TV video system format (NTSC or PAL). NTSC is the default setting.
POWER RESUME	Turns resume playback on or off. When enabled, playback may continue from the last stopped position.
Screen Saver	Turns the screen saver function on or off.
TV Type	Sets screen display aspect ratio.
Password	Changes the parental control password. (Default password: 0000)
Rating	Sets parental control restrictions for supported DVDs.
Default	Restores the player to the original factory settings.

LANGUAGE SETUP

Osd Language	Selects the language used for on-screen menus.
Audio Lang	Selects the default DVD audio language, if available.

Subtitle Lang	Selects the default DVD subtitle language, if available.
Menu Lang	Selects the default DVD menu language, if available.

AUDIO SETUP

Key	Adjusts audio pitch levels.
------------	-----------------------------

VIDEO SETUP

Brightness	Sets the picture brightness.
Contrast	Adjusts the difference between light and dark areas.
Hue	Adjusts overall color tones.
Saturation	Adjusts color intensity.
Sharpness	Adjusts picture detail sharpness.

DIGITAL SETUP

Dynamic Range	Adjusts the difference between loud and soft sounds.
Dual Mono	Selects the audio output mode.



Note

The player saves your settings after power is turned off.

Troubleshooting

Most playback issues are caused by simple setup, disc, or media compatibility conditions and can usually be resolved quickly.

Please review the troubleshooting suggestions below before returning the player.

1. The Player Does Not Power On

- Ensure the power adapter is securely connected.
- Ensure the wall outlet or vehicle power outlet is working properly.
- If using battery power, recharge the battery fully.
- Try turning the player on using the **POWER OFF/ON** switch on the main unit.

2. Black Screen but Audio Works

- Press the  (Screen On/Off) button to turn the LCD screen back on.
- Ensure the player is not in AV IN or AV OUT mode.
- Adjust the screen brightness in the settings menu if necessary.

3. Disc Does Not Play

- Ensure the disc label side faces upward.
- Remove the protective card inside the disc compartment before first use.
- Clean the disc using a soft, lint-free cloth.
- Try another commercial DVD or CD in good condition.
- Blu-ray discs are not supported.

4. “NO DISC” Appears

- Ensure a compatible disc is inserted correctly.
- The disc may be dirty, scratched, or unsupported.
- Try another commercial DVD or CD in good condition.
- Some recorded discs may not be compatible.

5. USB Drive or Memory Card Not Detected

- Ensure the USB drive or memory card is formatted in **FAT32** format.
- Supports storage devices up to **128GB**.
- Some media files may not be compatible depending on file format and encoding.
- USB charging is not supported.

6. No Sound

- Ensure the volume is turned up.
- Ensure headphones are not connected.
- Check that the **AV cable** is connected correctly when using **TV output**.
- Ensure the TV volume is turned up if connected to a TV.

7. Remote Control Does Not Work

- Ensure the batteries are installed correctly.
- Replace the batteries with new AAA batteries.
- Point the remote control directly toward the player.
- Remove obstacles between the remote and player.

8. The Player Does Not Charge Properly

- Use only the supplied power adapters.
- Ensure the charging indicator lights while charging.
- Fully charge the battery before first use.
- Recharge the battery every 2–3 months during long-term storage.

9. Distorted Picture or Unstable Playback

- Clean the disc carefully with a soft cloth.
- Ensure the disc is free from scratches or damage.
- Ensure the selected TV system matches your TV (**NTSC/PAL**).
- Some discs may contain poor-quality recordings.

10. The Player Feels Warm

- The player may become warm during extended use. This is normal.

If the problem persists, please contact MEGATEK Customer Support with your order information and a description of the issue.


Email: support@megatekelec.com

Maintaining your DVD Player

Care and Handling of Discs

Handling discs

Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints do not get on the surface. Never stick paper or tape on the disc.

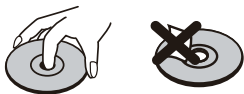

Storing discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

Cleaning discs

Fingerprints and dust on the disc can cause poor sound quality and distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center out.



Note

Do not use strong solvents such as alcohol, benzine, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.

Cleaning the DVD Lens

If your DVD lens gets dirty it can cause poor sound quality. To clean the lens you will need to purchase a DVD lens cleaner which can maintain the output sound quality of your system. For instructions on cleaning the DVD lens, refer to the literature accompanying the lens cleaner.

Cleaning Your DVD Player

To prevent fire or shock hazard, disconnect your DVD Player from the AC power source when cleaning.

The finish on your DVD Player may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.

Mild soap and a damp cloth may be used on the front panel.

Product Information



Note

Product information is subject to change without prior notice.

Dimensions	253 x 41 x 205mm
Weight	1.0 kg
Power Supply	AC Adapter Input: 100–240V ~ 50/60Hz AC Adapter Output: DC 12V $\equiv$ 1A
Power Consumption	12W
Operating Temperature	0°C to 45°C
Laser Wavelength	650 nm
Video Output	1 Vp-p 75 Ohm unbalanced
Video System	NTSC / PAL
Video Output Level	1Vp-p $\pm$ 20%
Video Output Impedance	75 Ω
Audio Output Level	1.4V $\pm$ 10%
Supported Media	DVD, CD, USB, SD/MMC
Audio Distortion	$\leq$ 80 (1KHz)
Frequency Response	20Hz – 20KHz $\pm$ 1dB
Signal-to-Noise Ratio	$\geq$ 80 dB
Channel Separation	$\geq$ 80 dB
Dynamic Range	$\geq$ 85 dB

Legal Notices

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

12-Month Warranty

Need help? Contact us first — we'll help you fix it fast.

Warranty Coverage

Your product is covered by a 12-month limited warranty from the date of purchase.

If your product is found to be defective due to materials or workmanship, we will provide a replacement unit at no additional cost.

How to Get Support

If you experience any issues, please contact us first — most problems can be resolved quickly.

- Your Amazon Order ID.
- A brief description of the issue.
- Photos or a short video (if applicable).

Email: support@megatekelec.com

Important Notes

- This warranty is in addition to your Amazon return and refund policy.
- This warranty applies to the original purchaser and requires valid proof of purchase (Amazon order ID).
- This warranty applies only to products purchased from official MEGATEK listings on Amazon. Products purchased from unauthorized sellers or resellers are not covered.

Exclusions

- Misuse or improper operation.
- Accidental damage or physical impact.
- Unauthorized modification or repair.
- Normal wear and tear.

Our Commitment

We aim to provide fast, simple, and hassle-free support. If you have any questions, please contact us.

Need Help?

If you have questions or encounter any problems,
we're here to help.

✉ **support@megatekelec.com**

