 


Sleep Sound Machine

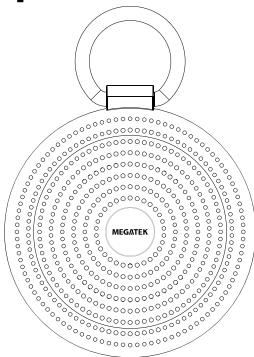

User's Manual

One (1) Year Replacement for Defective Product.

If you have questions or encounter any problems, we're here to help.

✉ support@megatekelec.com

Contents

Contents -----	01
Safety Instructions -----	02
Specifications -----	02
What's in the Box -----	03
Product Overview -----	04
Charging -----	05
Power On/Off -----	05
Adjusting the Volume -----	06
Bluetooth Playback -----	06
Built-in Sounds -----	08
Recording -----	09
Ambient Light -----	10
Sleep Timer -----	11
Troubleshooting -----	11
Legal Notices -----	13
12 Months Warranty -----	14

Friendly Reminder:

Please fully charge your sound machine before first use. Your new machine may arrive with the built-in batteries low, and low batteries may cause sound distortion, unstable connection etc.

Safety Instructions


- Avoid dropping the unit.
- Do not disassemble.
- Do not submerge in water.
- Avoid extreme temperatures.
- Do not use the device outdoors during thunderstorms.
- Use original or certified cables.
- Do not use any corrosive cleaner/oil to clean.

Specifications

- **Power Input:** USB-C, DC 5V = 1A
- **Audio output:** 3W
- **Battery:** 2000 mAh Lithium-ion
- **Charging time:** 3-4 hours
- **Dimensions:** 5.79 × 4.06 × 2.17 inches
- **Bluetooth Version:** 5.1
- **Bluetooth Pairing Name:** Megatek Somnia
- **Bluetooth Operation Range:** Up to 33 ft. (10 m, line of sight)

What's in the Box


Check and identify the contents of your package:

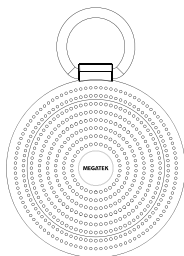


1 x Megatek Somnia



1 x USB-C Charging Cord

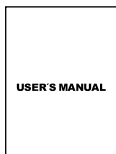


1 x User's Manual

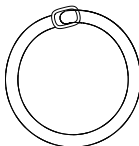

1 x Clip

Product Overview

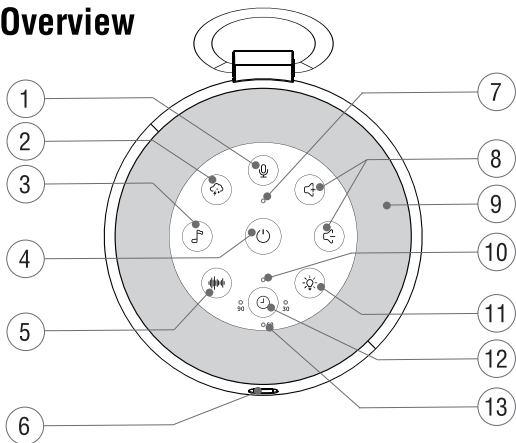

1. 🎤 Recording Button
2. ☁️ Nature Sounds Button
3. 🎵 Lullabies Button
4. ⏻ Power / Bluetooth Button
5. 🔊 White Noise Button
6. ⚡ DC 5V Power Jack (USB-C)
7. Built-in Microphone

8. 🔊 +/- Volume + / – Buttons
9. Ambient Light
10. Power / Bluetooth Indicator
11. ☀️ Ambient Light Button
12. ⌚ Sleep Timer Button
13. Timer Indicator

Charging

Connect the supplied USB-C charging cable to the sound machine and to the USB DC 5V charging port.


The Power indicator turns red while charging and turns off when fully charged.



Note: For first use, fully charge the sound machine (charging time: 3–4 hours).

Power On/Off

- **Power On:** Press and hold the  Power button for 2 seconds.
When powered on, the Power indicator will flash green in Bluetooth mode, or turn solid green in other modes. The indicator will automatically turn off 15 seconds after playback begins.
- **Power Off:** Press and hold the  Power button again for 2 seconds.

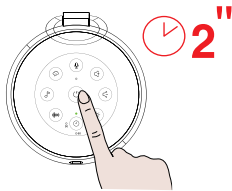

Note: When powered on for the first time, the sound machine will automatically enter Bluetooth Speaker mode. On subsequent uses, the sound machine resumes the last used sound and light settings.

Adjusting the Volume /

- **Increase Volume:** Press the  button once to raise the volume step by step, or press and hold to increase continuously.
- **Decrease Volume:** Press the  button once to lower the volume step by step, or press and hold to decrease continuously.


Note: You will hear a short alert tone when the minimum or maximum volume level is reached.

Bluetooth Playback

Before you can use your sound machine with a Bluetooth device, you need to pair your device to the sound machine.

Notes:

- Your sound machine must be turned on to make a Bluetooth connection.
- Place the Bluetooth device within 33 ft. (10 m) of your sound machine.

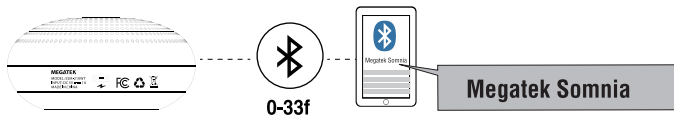

Pairing your devices

1. Press the  Power button to switch to Bluetooth mode.
 - The Power/Bluetooth indicator will flash green rapidly, and you will hear the prompt: “**Bluetooth mode. Waiting for connection.**”
2. On your Bluetooth device, turn on Bluetooth and search for available devices.
3. Select “**Megatek Somnia**” from the list.
 - If the name does not appear, repeat step 1-2.
4. When pairing is successful, you will hear the prompt “**Connected,**” and the Power/Bluetooth indicator will flash green slowly.

Note: Your sound machine can only be connected and play content from one device at a time.

Reconnecting:

- When switched to Bluetooth mode, the sound machine automatically reconnects to the last paired device within range.
- If it does not reconnect, manually select “**Megatek Somnia**” in your device’s Bluetooth settings.
- To connect to a different device, first turn off Bluetooth on the currently connected device, then select “**Megatek Somnia**” on the new device.

Disconnecting:

- Turn off the Bluetooth function on your connected device to disconnect. You will hear the prompt: “Disconnected. Waiting for connection.”

Bluetooth Controls

Once your device is paired, you can control playback either from the connected device or directly on the sound machine.

- **On the connected device:** Use the music app or built-in control buttons (such as volume or playback keys) to control playback.
- **On the sound machine:**
 - Press the  **button** to start or pause playback.
 - Press the **Volume – / + buttons** to adjust the sound level.

Notes:

- Playback controls on the sound machine may not be supported by all apps or devices.
- The maximum volume depends on the settings of both your device and the sound machine. If the sound is too low, check the volume levels on both sides.
- Bluetooth indicator will automatically turn off 15 seconds after playback begins.

Built-in Sounds

Your sound machine includes three types of built-in sounds to support relaxation and better sleep:

-  **Nature Sounds** – 8 natural soundscapes that bring the calming effects of the outdoors into your sleep environment.

- 🎵 **Lullabies** – 8 soothing melodies designed to relax children and adults alike for easier sleep.
- 🔊 **White Noise** – 8 variations that create a consistent sound environment for deeper sleep.

How to Use:

1. Press the corresponding sound button (Nature, Lullabies, or White Noise) to start playback and cycle through the available options.
2. Short-press the same button again to switch to the next sound.
3. Press and hold the button to stop playback.
4. To resume, short-press the same button.

Notes:

- When playback is stopped, pressing the Volume + / – buttons will not restart the sound, but will pre-adjust the volume level for when playback resumes.
- When playback stops, the Power indicator turns solid green and will automatically turn off again 15 seconds after playback resumes.

Recording 🎙️

The recording function lets you capture short audio clips, such as a parent's voice, bedtime stories, or comforting sounds, and play them back to help with relaxation or sleep. You can record up to 180 seconds (3 minutes) of audio.

1. **Start Recording:** Press and hold the  Recording button for 2 seconds. Recording will start automatically after the countdown tone.
2. **Stop Recording:** Press any button to stop recording. The machine will immediately play back the recorded content.
3. **Overwrite Recording:** Press and hold the  Recording button again for 2 seconds, then repeat the steps above.
4. **Playback Control:** Press the  Recording button to start or stop playback of the recorded audio.

Notes:

- The first time you use the recording function, you must create a recording before playback is available.
- Playback of recorded audio always starts from the beginning of the recording. Resuming from the middle is not supported.
- When playback stops, the Power indicator turns solid green and will automatically turn off again 15 seconds after playback resumes.

Ambient Light

- **Turn On/Off:** Press the  button to turn the light on or off.
- **Change Color:** Press the  button repeatedly to cycle through 9 light color modes
- **Adjust Brightness:** Press and hold the  button to adjust brightness, then release when the desired level is reached.

Note: The light can be used independently, even when the sound machine is turned off.

Sleep Timer ⌚

By default, the sound machine plays continuously with no sleep timer set.

To set a sleep timer:

- Press the ⌚ Timer button repeatedly to cycle through the timer options: 30 minutes, 60 minutes, 90 minutes, or No Timer.
- The corresponding timer indicator lights up green.
- The sound machine will automatically power off after the selected duration.

Notes:

- The timer indicator light turns off 15 seconds after the last operation.
- If a sleep timer is set but the indicator is off, pressing the Timer button once will briefly show the previously selected timer. Press again to change the timer setting.

Troubleshooting

No Charging

- Confirm that you are using the supplied USB-C power cord or a certified equivalent.
- Make sure the charging cable is firmly connected to both the sound machine and a working USB power adapter or port.
- Try a different USB power adapter or port to rule out a faulty power source.
- Allow up to 3–4 hours for a full charge.
- **Note:** The Power indicator turns **red while charging** and turns **off when fully charged**.

No Power

- Make sure the USB-C power cord is securely connected to both the sound machine and a working power source.
- Press and hold the  **Power** button for 2 seconds to turn the unit on.
- If using battery power, recharge the unit fully before use.

No Bluetooth Connection

- Ensure the sound machine is in Bluetooth mode (indicator flashing green).
- Make sure the machine is not already connected to another Bluetooth device. If it is, disconnect that device first.
- Check that your device's Bluetooth is turned on and within 33 ft (10 m).
- Delete "**Megatek Somnia**" from your device's Bluetooth list, then pair again.

No Sound

- Adjust the volume on both the sound machine and the connected device.
- Confirm that a sound source (built-in sound, recording, or Bluetooth) is active.
- Check if there is a recorded audio when selecting the Recording mode.

Buttons Not Responding / Unit Frozen

- Press and hold both the  **Power** button and the  **White Noise** button at the same time for 2 seconds to reset the unit.
- If the issue persists, recharge the battery fully and try again.

Legal Notices

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, maybe cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

12 Months Warranty

Thank you for choosing MEGATEK.

We warrant your product to be free from defects in materials and workmanship for **12 months** from the date of receipt. This warranty is in addition to your rights under Amazon's return and refund policies.

- If your product becomes defective within the warranty period, MEGATEK will provide a brand-new replacement (where possible).
- MEGATEK will cover the reasonable expenses of claiming the warranty.
- This warranty does not apply to defects caused by alteration, accident, misuse, abuse, or neglect.

For warranty claims or product support, please contact us with your Amazon order ID and a description of the problem:

Email: **support@megatekelec.com**

Amazon Buyer-Seller Messaging: Go to **Your Orders**, find your order, and click **Ask Product Question**.

Need Help?

If you have questions or encounter any problems, we're here to help.

✉ support@megatekelec.com