MEGATEK®

Quick Start Guide

Stereo Speakers
T4
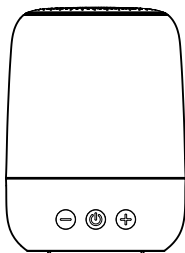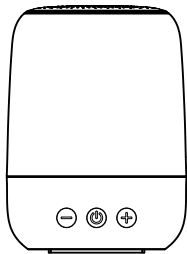
Before using your new product, please read these instructions to prevent any damage.
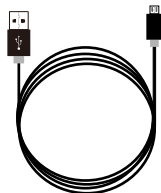
1 Package Contents

2 x Speakers

3.5mm Audio Cable

Micro-USB Charging Cable

MEGATEK®

Quick Start Guide

Stereo Speakrs
T4

Before using your new product, please read these
instructions to prevent any damage.

www.megatekelec.com
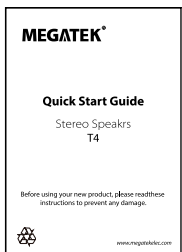
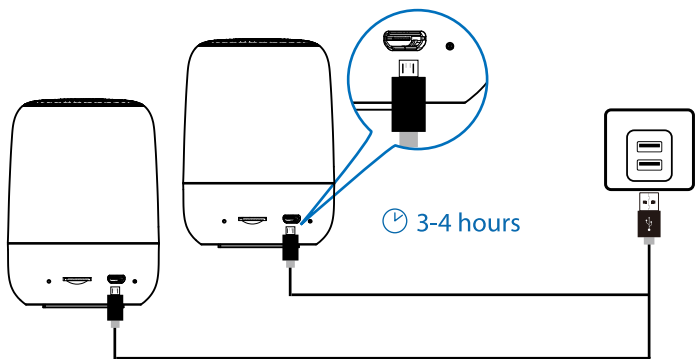Quick Start Guide

USER'S MANUAL

MEGATEK®

User's Manual

2 *Charge your Megatek T4*
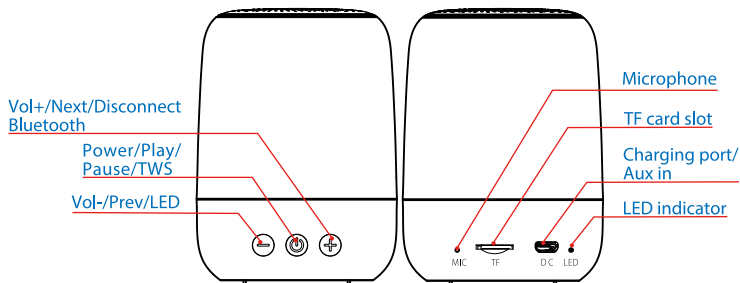

🕐 3-4 hours

🕐 3-4 hours
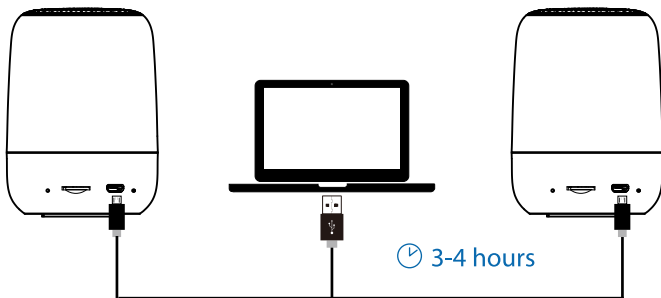
💡 Use the included USB cable to charge your Megatek T4 and make sure they are fully charged before first use.

Disconnect your speakers from charger when fully charged. Do not charge your speakers for extended periods.

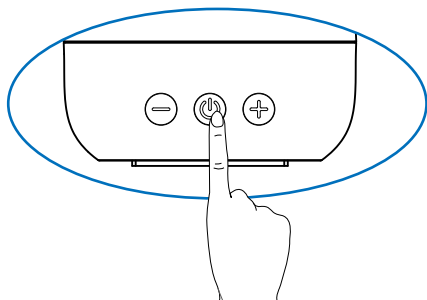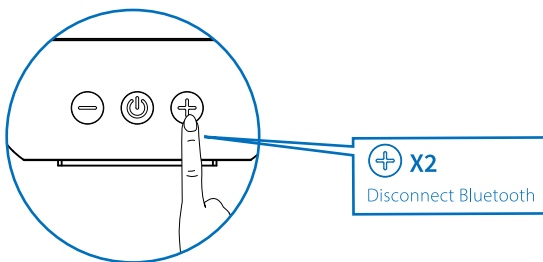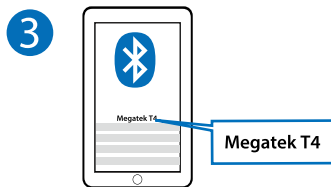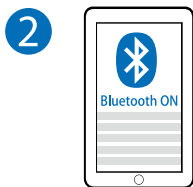When not in use, store your speakers in a cool place.

3 Overview of the main unit

Vol+/Next/Disconnect Bluetooth

Power/Play/Pause/TWS

Vol-/Prev/LED

Microphone

TF card slot

Charging port/Aux in

LED indicator

MIC   TF   DC   LED

4 Using Your Megatek T4

3" ON/OFF

5 Bluetooth ✳

1

⏱ 3" ON

2

✳
Bluetooth ON

3

✳
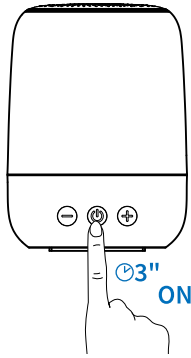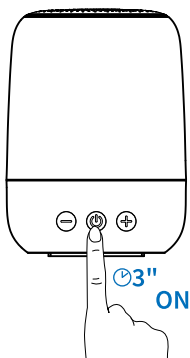Megatek T4 → **Megatek T4**

⊕ X2
Disconnect Bluetooth
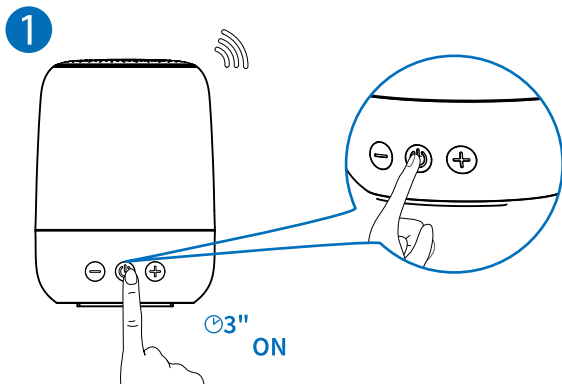
6 *True Wireless Stereo* ((TWS))

1 Press and hold the ⏻ button to turn on the two Megatek T4 respectively, and wait for the two Megatek T4 to automatically pair as one (TWS), a tone will sound when paired.
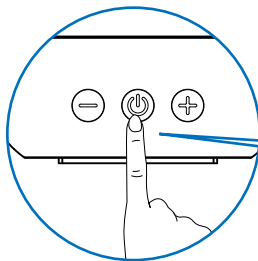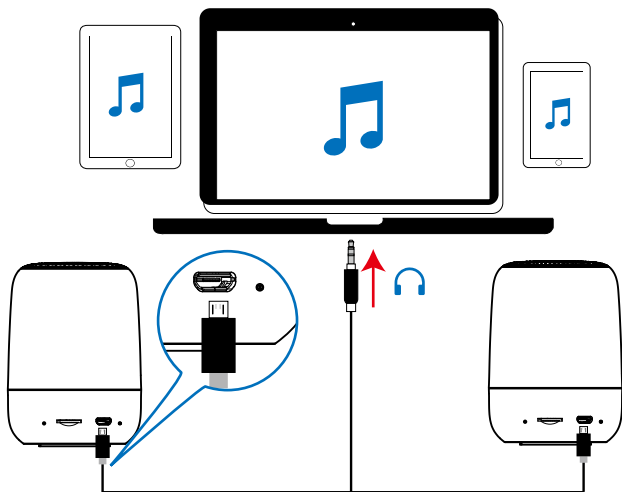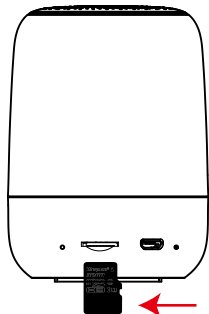

🕐3" ON   🕐3" ON

2

Bluetooth ON

3

Megatek T4

Megatek T4

X2
Pair/Unpair TWS

7 *Aux In*

8 *TF (Micro-SD) card*

Note: TF (Micro-SD) cards can only be inserted in one direction. If the card does not easily slide and "clip" into place, remove, turn it around, and re-insert into the slot.

TF (Micro-SD) card
Note:TF card 8G/16G/32G supported.

Dear Customer:
 If you are satisfied with our products and service, please rate us with 5 stars review and feedback! Your supports means a lot to us and will help us bring more good products in return to you.

Always there to support you

Get support at:
www.megatekelec.com

Question?
Contact Megatek:
service@megatekelec.com